

**Toyota**

Toyota			Navitas Replacement	
Truck Model	Truck Type	OEM Control	Traction Control	Pump Control
FB25/30	4 Wheel CB	SCR	<a href="#"><u>TSE 1000-48</u></a>	<a href="#"><u>PSE 1000-48</u></a>
FB5/20	4 Wheel CB	SCR	<a href="#"><u>TSE 550-48</u></a>	<a href="#"><u>PSE 550-48</u></a>
FBC10/20	4 Wheel CB	SCR	<a href="#"><u>TSE 550-48</u></a>	<a href="#"><u>PSE 550-48</u></a>
FBC25/30	4 Wheel CB	SCR	<a href="#"><u>TSE 1000-48</u></a>	<a href="#"><u>PSE 1000-48</u></a>
FBCA15/20	4 Wheel CB	SCR	<a href="#"><u>TSE 550-48</u></a>	<a href="#"><u>PSE 550-48</u></a>
FBCA25/30	4 Wheel CB	SCR	<a href="#"><u>TSE 1000-48</u></a>	<a href="#"><u>PSE 1000-48</u></a>
FBE10/13	3 Wheel	SCR	<a href="#"><u>TSE 1000-48</u></a>	<a href="#"><u>PSE 1000-48</u></a>
FBE15/18	3 Wheel	SCR	<a href="#"><u>TSE 1000-48</u></a>	<a href="#"><u>PSE 1000-48</u></a>